

Cyberex BCM-SFCM Configurator/Monitor

User's Manual

Updated: 04/01/13



Thomas & Betts Power Solutions
5900 Eastport Boulevard • Richmond, VA 23231-4453
Tel: 800-238-5000 • Fax: 804-236-4047

TABLE OF CONTENTS

TABLE OF CONTENTS	2
1.0 Program Description.....	2
2.0 PC System Requirements	3
3.0 Installation	3
4.0 The Initial Login	3
5.0 PC Setup	4
6.0 General Comm. Port Usage on the BCM/SFCM	5
7.0 The View Menu	5
8.0 The System and Panel Configuration Window	6
8.1 Panel Types.....	7
9.0 The "CB View" Windows	8
10.0 The Branch Readings Windows	10
11.0 The Subfeed Windows	10
11.1 Changing Settings on the Subfeed Windows	11
11.2 Resetting Latched Alarms and Warnings	11
12.0 Other BCM Branch and SFCM Subfeed Readings Windows	12
13.0 BCM Branch and SFCM Subfeed Configuration Windows	13
14.0 BCM Panel Readings/Configuration Window.....	14
15.0 Calibrating the BCM/SFCM	15
16.0 Upgrading/Downgrading the BCM/SFCM Firmware	15
17.0 Opening the Terminal Window	17
18.0 Temporarily Closing the PCs Serial Port.....	18
19.0 Creating Service Port Script Files.....	19
19.1 Procedure for Creating a New Script File	22
19.2 Procedure for Creating a "Verify Script File"	23
20.0 Running Service Port Script Files.....	24
21.0 Capturing Settings	25
22.0 Comparing Captured Setting Files	26
23.0 Creating Script Files from Captured Settings Files	28
24.0 Window Arrangement and Navigation Features.....	30

1.0 Program Description

This program can be used for configuring and monitoring the Cyberex Branch Circuit Monitor/Subfeed Circuit Monitor (BCM/SFCM). The supported module types are listed below in [Table 1-1](#).

Table 1-1: Module Types

Module Type	Firmware Version Examples
BCM	0.25
SFCM (Old CT Arrangement)	0.23, 0.31, 0.32
BCM/SFCM Unified (Old CT Arrangement)*	1.07 – 1.12
BCM/SFCM Unified (New CT Arrangement)*	1.16

* The "Old CT Arrangement" and "New CT Arrangement" are explained below.

The "Old CT Arrangement" and "New CT Arrangement" configurations are determined by the firmware version. For example, Firmware v1.16 is only for the New CT Arrangement. It affects only the CT arrangement for the SFCM configuration. These SFCM CT arrangements are shown in [Section 9.0](#) below. This program can support either arrangement by selecting it in the "PC Setup" window as detailed below in [Section 5.0](#).

This program supports the configurable Branch Current Zero Cutoff threshold setting (Modbus Register 863), which is available in BCM firmware version 1.08 and higher. It also supports the following BCM sensing options, which are available in the “Unified” types:

- Voltage Sensing Enabled/Disabled
- L-N/L-L Selection Support (Modbus Register 864)
This feature is supported in “BCM/SFCM Unified” software versions 1.12 and higher.
Note that the “L-L Sensing” option requires a special voltage daughterboard: P/N 41-98-658993

The program can be used in either of the following communications modes: RS-232, RS-485, or TCP. Only limited configuration can be done when in the RS-485 or TCP modes.

Support for these items are configured in this program as detailed below in Section 5.0.

2.0 PC System Requirements

- IBM Pentium or higher (or compatible) PC with a free serial port, network interface card, and a minimum screen resolution setting of 1024 by 768.
- Microsoft Windows XP or higher.
- Microsoft Excel 2003 is needed for certain functions regarding Captured Settings in Section 22.0.

3.0 Installation

This program can be installed by double-clicking the ' BCM-SFCM-CM_Setup_vX_X_X.exe' file provided and following the on-screen instructions. This setup program will put a shortcut on the Desktop and in the Windows Start→Programs folder.

4.0 The Initial Login

When the program is started, the main window will appear as shown in Figure 4-1 below.


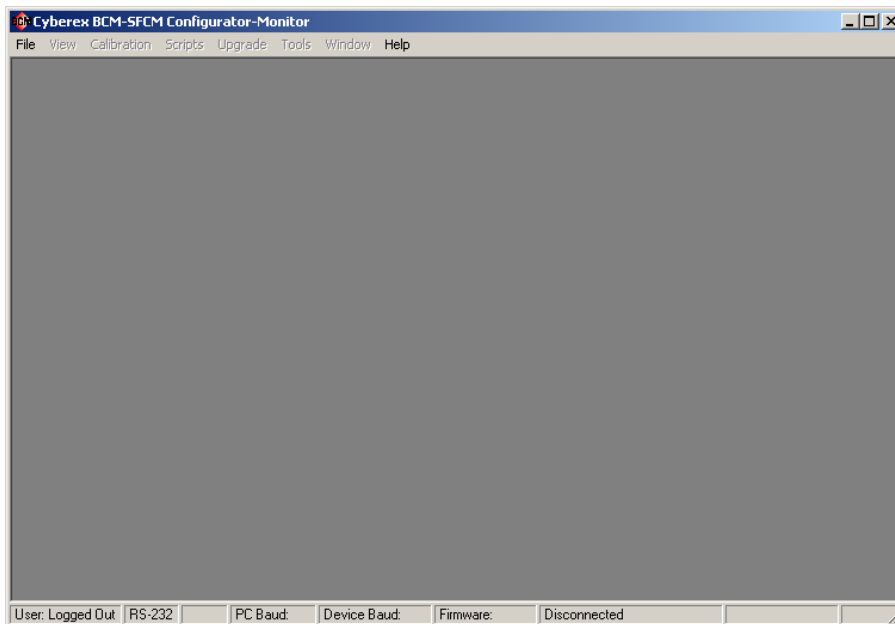


Figure 4-1 – The Main Screen

An initial login is required before using the program. Once you are logged in, you have the option of logging out between uses, or remaining logged in for future uses. To log in, click File→Login in the main menu bar. The Login dialog box will open as shown below.

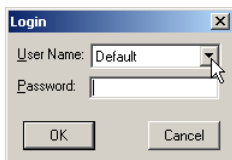

There are three login levels as shown in [Table 4-1](#) below.

Table 4-1: Login Levels

Level	User Name	Default Password	Permissions
0	Default	Default	Permission to view meter readings and settings only.
1	Administrator	Admin	Permission to configure and calibrate the unit in addition to those of Level 0 (above).
2	Supervisor	Super	Permission to upgrade/downgrade the unit's firmware, to change the program's passwords, and to use configuration script files, in addition to those of Level 1 (above).

When you are finished using the program, you have the option of logging out or remaining logged in for the next use. To log out, click File→Logout in the main menu bar.

5.0 PC Setup

Once you are logged in and you are connected to the DB9 (RS-232) connector on a BCM/SFCM unit via a null-modem serial cable, the program will start polling the unit. If not, you may need to change settings on the "PC Setup" dialog box (File→PC Setup on the main menu bar) as shown below.

Note the "Unit Type" setting in the PC Setup dialog box below in [Figure 5-1](#). This should be set for the type of unit you are accessing. The supported module types are listed in [Table 1-1](#) above.

The radio buttons in the BCM/SFCM-Unified frame must be set only when you are accessing units in the RS-485 or TCP mode only with the newer type BCM/SFCM-Unified software. Items that do not need to be set with the various modes and unit types are disabled (grayed-out).

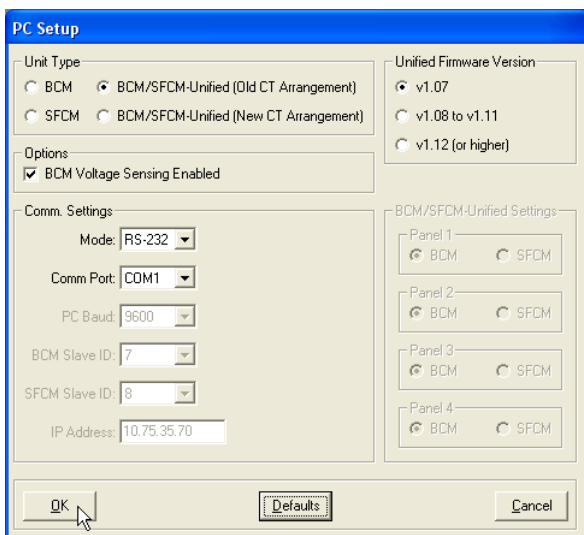


Figure 5-1 – The PC Setup Dialog Box

The "PC Setup" window defaults as shown above in [Figure 5-1](#). The "Firmware Version" selection is used to limit or add the registers supported and polled. The program may not work correctly if the wrong version is selected. An explanation of the firmware versions vs. the added registers are shown in [Table 5-1](#) below.

If needed, select a different setting and click the OK button to save the new setting.

Table 5-1: Firmware Versions

Firmware Version	Modbus Registers Added
v1.08	Register 863 (Branch Current Zero Cutoff) was added. This is a configurable threshold setting that can be set to force low branch currents to zero. (Readings less than this setting will appear as zero amps.)
v1.12	Register 864 (L-N / L-L Selection) was added. Note that the "L-L Sensing" option requires a special voltage daughterboard: P/N 41-98-658993

6.0 General Comm. Port Usage on the BCM/SFCM

The BCM/SFCM is designed to be configured using the RS-232 Mode (via the DB9 connector). When using this mode, the baud and Slave ID settings can be changed without affecting the communications. The program uses the various baud, slave ID, IP address, and panel settings in this window only when in the RS-485 or TCP mode.

In the RS-232 Mode, the baud is always "9600", the Slave ID is always "7", and the program automatically determines how the four panels are set. The grayed-out settings in the "Comm Settings" frame of the "PC Setup" dialog box ([Figure 5-1 above](#)) show the settings the program will use when in the RS-485 or TCP mode. These settings will become enabled and can be changed as required when the mode selection is changed.

7.0 The View Menu

When the program is first installed and you have logged in, there will be no windows selected in the View menu as shown below in [Figure 7-1](#). The items enabled in the menu depend on if the program is talking to a BCM/SFCM unit and how the BCM/SFCM's panels are configured. Any combination of the enabled items in the View menu can be selected to view. When an item is selected, its window will open and a checkmark will appear next to the item in the menu. The item can be unselected by either re-clicking the selected item in the menu or by closing its window.

The program remembers the views selected when the program is closed and reopened later. It also remembers the positions of open windows.

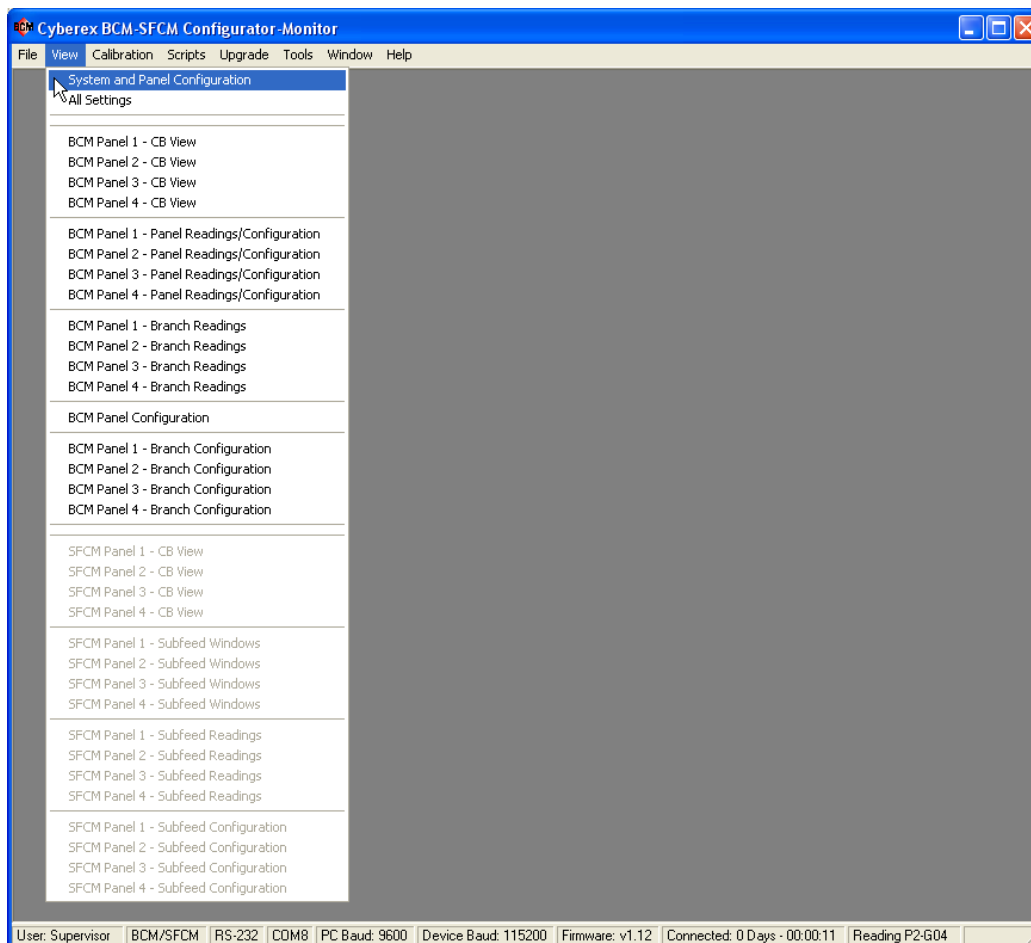


Figure 7-1 – The View Menu

8.0 The System and Panel Configuration Window

The first item on the View menu is for the System and Panel Configuration window. (See below.)

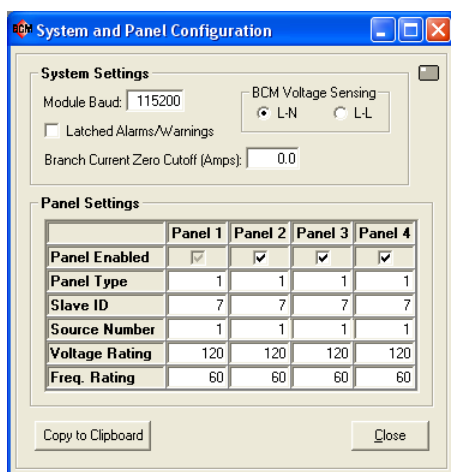


Figure 8-1 – The System and Panel Configuration Window

This window is used for setting the baud setting and the Modbus slave IDs of the BCM/SCFM as well as some of the other basic system and panel settings. In the example screenshot above, Firmware Version, "v1.12 (or higher)" is selected in the PC Setup window (Figure 5-1); otherwise, if "v1.07 (or lower)" were selected, the BCM Voltage Sensing (L-N /L-L) radio buttons and the Branch Current Zero Cutoff setting would be disabled (grayed-out) in the "System and Panel Configuration" window.

Other windows are also available for changing the other panel settings, which are addressed below.

You must be logged in on Level 1 or 2 to can change the settings in the "System and Panel Configuration" window. The items can be changed by clicking the checkboxes or double-clicking the white text boxes and entering or selecting a new value in the popup window.

8.1 Panel Types

There are five Panel Types supported as shown below in the "Set Panel Type" window. Note that when Panel Type "0" (BCM – Sequential Numbering) is selected, there are two "Sequential Numbering" sub-options that can then be selected: One Column (Column Width) or Two Columns.

This window opens by double-clicking one of the Panel Type textboxes in the System and Panel Configuration window. The Panel Type can then be changed by selecting a different type and clicking OK as shown below.

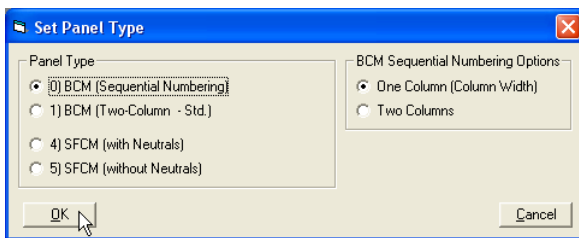


Figure 8-2 – The "Set Panel Type" Window

9.0 The "CB View" Windows

An example of the "CB View" windows are show below in [Figure 9-1](#). The window for each panel is dependent on how the panel is configured.

This example shows the following Panel Types:

- Panel 1: Panel Type 0 – BCM Sequential Numbering (Column-Width Panelboard)
- Panel 2: Panel Type 1 – BCM (Standard Two-Column Panelboard)
- Panel 3: Panel Type 4 – SFCM (with Neutrals) (Old CT Arrangement)
- Panel 4: Panel Type 5 – SFCM (without Neutrals) (Old CT Arrangement)

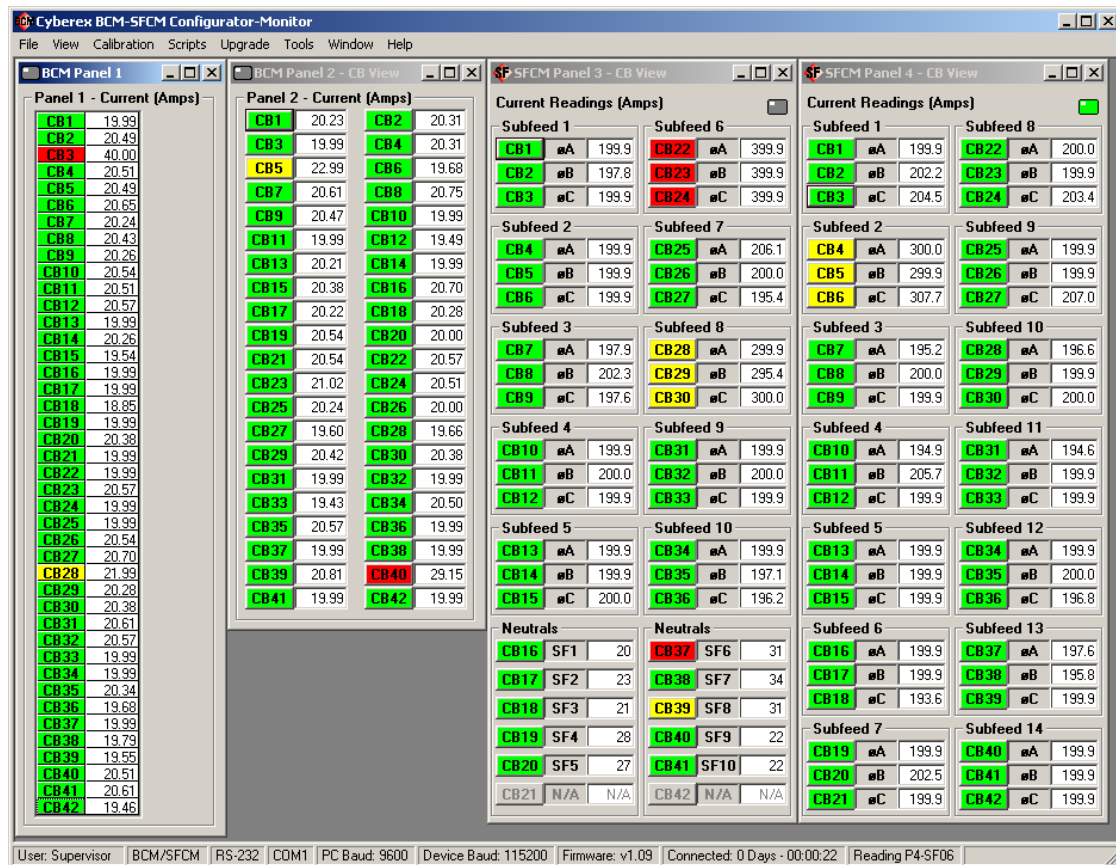


Figure 9-1: 'CB View' Windows
(Panels 3 & 4 show SFCM Panels with the "Old CT Arrangement")

The following screenshot example shows the following Panel Types:

- Panel 1: Panel Type 0 – BCM (Sequential Numbering Two-Column Panelboard)
- Panel 2: Panel Type 1 – BCM (Standard Two-Column Panelboard)
- Panel 3: Panel Type 4 – SFCM (with Neutrals) (New CT Arrangement)
- Panel 4: Panel Type 5 – SFCM (without Neutrals) (New CT Arrangement)


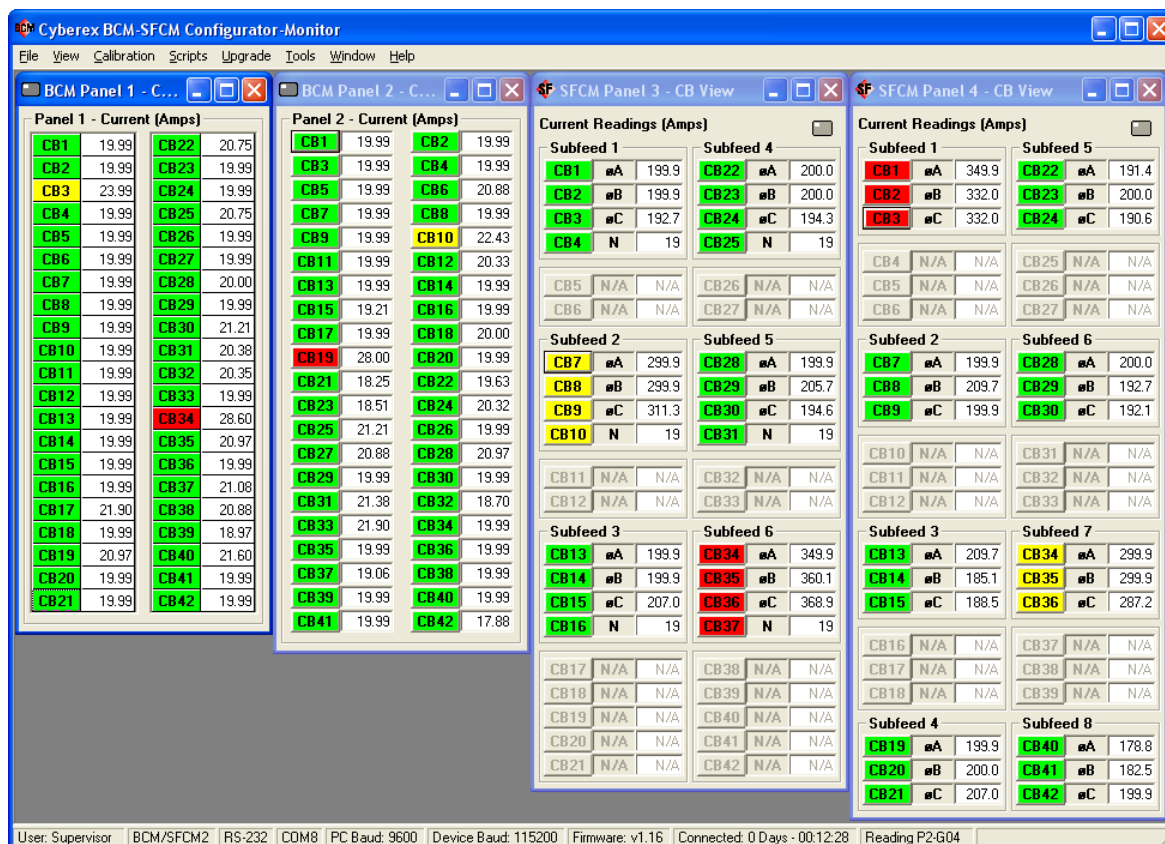



Figure 9-2: 'CB View' Windows
(Panels 3 & 4 show SFCM Panels with the "New CT Arrangement")

Left-clicking on any of the CB buttons on the CB View windows will cause the associated Branch or Subfeed Circuit window to open, as shown in a later section below. Multiple Branch and Subfeed Circuit windows can be opened at the same time.

Any of the circuits can be disabled or enabled by right-clicking on any of the corresponding CB buttons on the CB View windows and clicking the Disable or Enable popup, as shown below.

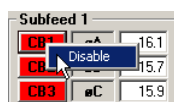


When a circuit is disabled, its CB buttons will appear grey on the CB View window as shown below. When a circuit is enabled, its CB buttons will appear green if no alarms or warnings exist for that circuit, or will appear red or yellow if there are any alarms or warnings, respectively.

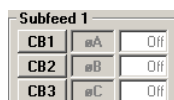

10.0 The Branch Readings Windows

The Branch Readings windows appear when CB buttons on BCM panels are clicked.
(See [Figure 10-1](#) below.) Active alarms and warnings will appear as red or yellow, respectively.

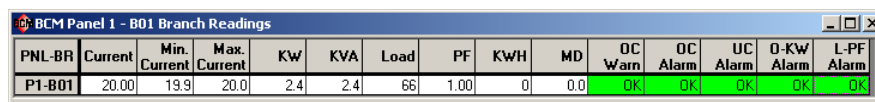


PNL-BR	Current	Min. Current	Max. Current	KW	KVA	Load	PF	KWH	MD	OC Warn	OC Alarm	UC Alarm	O-KW Alarm	L-PF Alarm
P1-B01	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK

Figure 10-1 – Branch Readings Window

As with other table-type windows like these, a popup menu appears when you right-click the table as shown below. In this case, you can use this popup menu to copy the text to the Windows clipboard, which you can then paste into other applications, like Excel.

Clicking Help in this popup menu opens a Help window that tells you the other things you can do with this table. In this case, it says you can reset latched alarms or warnings by double-clicking a cell in the associated column.

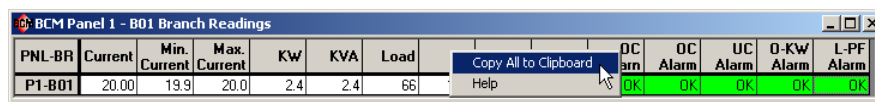


PNL-BR	Current	Min. Current	Max. Current	KW	KVA	Load	PF	KWH	MD	OC Warn	OC Alarm	UC Alarm	O-KW Alarm	L-PF Alarm
P1-B01	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK

Figure 10-2 – Popup Menu for Tables

11.0 The Subfeed Windows

The Subfeed windows appear when CB buttons on SFCM panels are clicked.
(See [Figure 11-1](#) below.)

The metering, alarm/warning states, and configuration settings for each subfeed can be seen in its Subfeed window as shown below. Active alarms and warnings will appear as red or yellow, respectively.

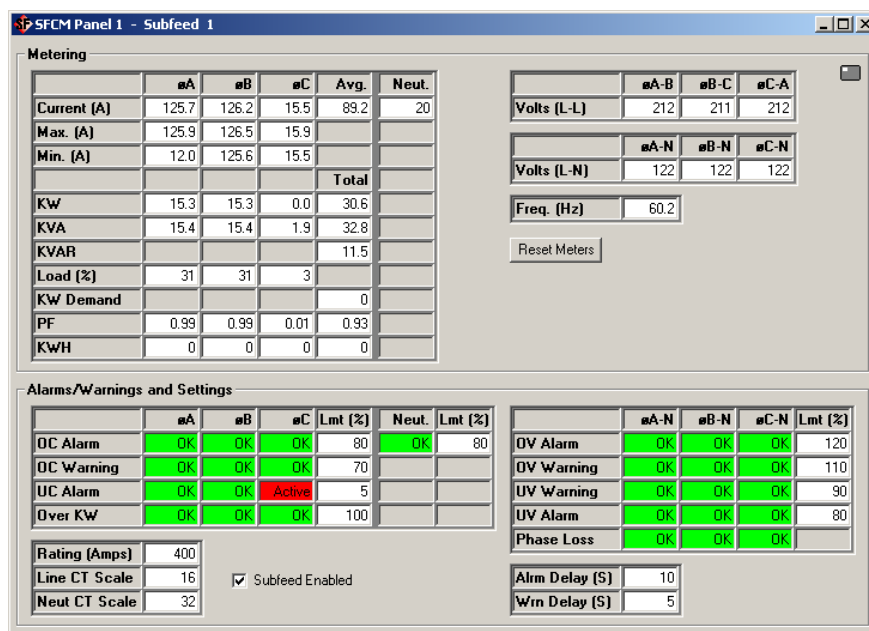

Metering

	aA	aB	aC	Avg.	Neut.
Current (A)	125.7	126.2	15.5	89.2	20
Max. (A)	125.9	126.5	15.9		
Min. (A)	12.0	125.6	15.5		
				Total	
KW	15.3	15.3	0.0	30.6	
KVA	15.4	15.4	1.9	32.8	
KVAR				11.5	
Load (%)	31	31	3		
KW Demand				0	
PF	0.99	0.99	0.01	0.93	
KWH	0	0	0	0	

Alarms/Warnings and Settings

	aA	aB	aC	Lmt (%)	Neut.	Lmt (%)
OC Alarm	OK	OK	OK	80	OK	80
OC Warning	OK	OK	OK	70		
UC Alarm	OK	OK	Active	5		
Over KW	OK	OK	OK	100		

Rating (Amps): 400
Line CT Scale: 16
Neut CT Scale: 32
☒ Subfeed Enabled

	aA-N	aB-N	aC-N	Lmt (%)
OV Alarm	OK	OK	OK	120
OV Warning	OK	OK	OK	110
UV Warning	OK	OK	OK	90
UV Alarm	OK	OK	OK	80
Phase Loss	OK	OK	OK	

Reset Meters

Alm Delay (S): 10
Wrn Delay (S): 5

Figure 11-1 – Subfeed Window

11.1 Changing Settings on the Subfeed Windows

When logged in on Level 1 or 2, you can change the settings in the Subfeed windows by double-clicking in the setting you want to change. When this is done, enter the new number into the popup dialog box that appears as shown below. Any setting inside the "Alarms/Warning and Settings" frame can be changed like this.

Also, when logged in on Level 1 or 2, you can reset the Min/Max Currents and the KWH readings by clicking the "Reset Meters" button on the Subfeed window.

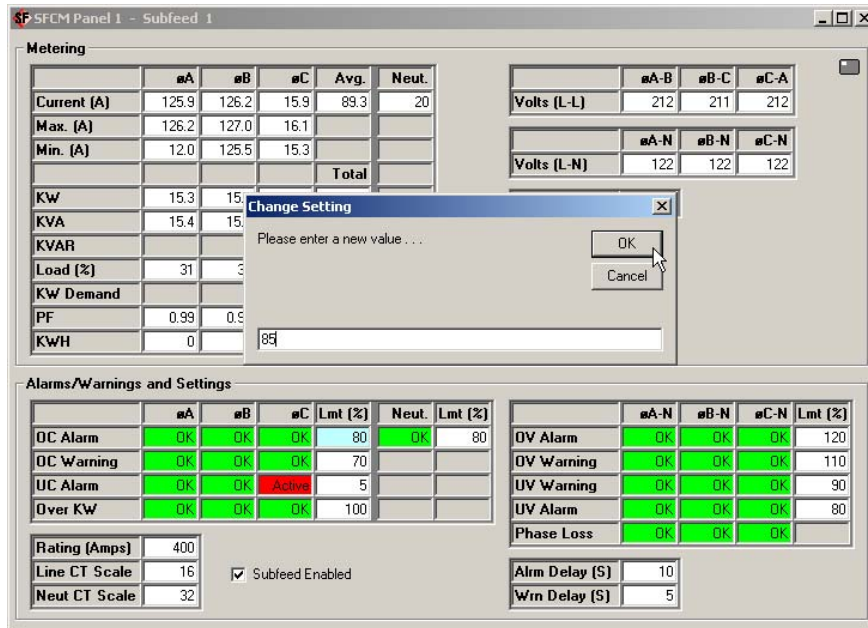


Figure 11-2 – Changing Settings in the Subfeed Window

11.2 Resetting Latched Alarms and Warnings

When logged in on Level 1 or 2, and the "Latching Alarms/Warnings" option is enabled (see the "Latching Alarms/Warnings" checkbox on the System Settings window), you can reset latched alarms and warnings by double-clicking on the red or yellow alarm/warning boxes on the Subfeed window. This will reset all of the alarms and/or warnings that are common with a certain Modbus register. These alarms/warnings are grouped as follows.

- OC Alarms (∅A, ∅B, ∅C, Neut.)
- OC Warnings (∅A, ∅B, ∅C)
- UC Alarms (∅A, ∅B, ∅C)
- Over KW Alarms (∅A, ∅B, ∅C)
- All OV/UV Alarms/Warnings
- Phase Loss Alarm

12.0 Other BCM Branch and SFCM Subfeed Readings Windows

In addition to the BCM Branch Readings and SFCM Subfeed windows above, which show readings for only one circuit, there are other windows available in the View menu, which show readings for all circuits for each of the four panels in a table format. Examples of these are shown below in [Figure 12-1](#) and [Figure 12-2](#), with their popup menus, which appear by right-clicking. The Help window for these screens state that you can reset latched alarms or warnings by double-clicking a cell in the associated column in the table.

BCM Panel 1 - Branch Readings: Updated 02/17/08 03:05:10 PM

PNL-BR	Current	Min. Current	Max. Current	KW	KVA	Load	PF	KWH	MD	OC Warn	OC Alarm	UC Alarm	0-KW Alarm	L-PF Alarm
P1-B01	20.00	20.0	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B02	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B03	19.99	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B04	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B05	19.99	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B06	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B07	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B08	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B09	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B10	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B11	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B12	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B13	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B14	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B15	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B16	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B17	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B18	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B19	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B20	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B21	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B22	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B23	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B24	20.00	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B25	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B26	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B27	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B28	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B29	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B30	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B31	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B32	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B33	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B34	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B35	19.99	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B36	2.22	2.2	2.2	0.2	0.2	7	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B37	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B38	19.99	19.9	20.0	2.3	2.3	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B39	19.99	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B40	20.00	19.9	20.0	2.4	2.4	66	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B41	2.22	2.2	2.2	0.2	0.2	7	1.00	0	0.0	OK	OK	OK	OK	OK
P1-B42	2.22	2.2	2.2	0.2	0.2	7	1.00	0	0.0	OK	OK	OK	OK	OK

Figure 12-1 – BCM Branch Readings Window

SFCM Panel 2 - Subfeed Readings

PNL-SF#	Reg. 1 Current aA	Reg. 2 Current aB	Reg. 3 Current aC	Reg. 4 Avg. Current	Reg. 5 Min. Current aA	Reg. 6 Min. Current aB	Reg. 7 Min. Current aC	Reg. 8 Max. Current aA	Reg. 9 Max. Current aB	Reg. 10 Max. Current aC	Reg. 11 KW aA	Reg. 12 KW aB	Reg. 13 KW aC	Reg. 14 KW Total	Reg. 15 KVA aA	R K
P2-SF01	100.0	99.9	99.9	100.0	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	11.9	36.0	12.0	
P2-SF02	100.0	100.0	100.0	100.0	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	12.0	36.0	12.0	
P2-SF03	99.9	100.0	100.0	99.9	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	12.0	35.9	12.0	
P2-SF04	100.0	100.0	100.0	100.0	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	11.9	36.0	12.0	
P2-SF05	100.0	99.9	100.0	99.9	99.9	99.9	99.9	100.0	100.0	100.0	11.9	11.9	12.0	35.9	11.9	
P2-SF06	100.0	100.0	100.0	100.0	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	12.0	36.0	12.0	
P2-SF07	100.0	100.0	99.9	100.0	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	11.9	36.0	12.0	
P2-SF08	100.0	99.9	99.9	99.9	99.9	99.9	99.9	100.0	100.0	100.0	12.0	12.0	11.9	35.9	12.0	
P2-SF09	99.9	99.9	100.0	100.0	99.9	99.9	99.9	100.0	100.0	100.0	11.9	12.0	11.9	36.0	12.0	
P2-SF10	100.0	100.0	100.0	99.9	99.9	99.9	99.9	100.0	100.0	100.0	11.9	12.0	12.0	36.0	11.9	

Figure 12-2 – SFCM Subfeed Readings Window

13.0 BCM Branch and SFCM Subfeed Configuration Windows

The BCM Branch Configuration and SFCM Subfeed Configuration windows show readings for all circuits for each of the four panels in a table format. Examples of these are shown below in Figure 13-1 and Figure 13-2, with their Table Instructions, which appear by right-clicking and selecting Help in the popup menu.

The Help windows for these screens state that you can change individual settings by double-clicking cells. Note that for the BCM Branch Configuration windows, you can change the setting for all branches in the panel by double-clicking the column header.

PNL-BR	Current Rating	OC Warning	OC Alarm Limit	UC Alarm Limit	Warning Delay	Alarm Delay
P1-B01	30	70	80	5	5	10
P1-B02	30	70	80	5	5	10
P1-B03	30	70	80	5	5	10
P1-B04	30	70	80	5	5	10
P1-B05	30	70	80	5	5	10
P1-B06	30	70	80	5	5	10
P1-B07	30	70	80	5	5	10
P1-B08	30	70	80	5	5	10
P1-B09	30	70	80	5	5	10
P1-B10	30	70	80	5	5	10
P1-B11	30	70	80	5	5	10
P1-B12	3					
P1-B13	3					
P1-B14	3					
P1-B15	3					
P1-B16	3					
P1-B17	3					
P1-B18	3					
P1-B19	3					
P1-B20	3					
P1-B21	3					
P1-B22	3					
P1-B23	3					
P1-B24	30	70	80	5	5	10
P1-B25	30	70	80	5	5	10
P1-B26	30	70	80	5	5	10
P1-B27	30	70	80	5	5	10
P1-B28	30	70	80	5	5	10
P1-B29	30	70	80	5	5	10
P1-B30	30	70	80	5	5	10
P1-B31	30	70	80	5	5	10
P1-B32	30	70	80	5	5	10
P1-B33	30	70	80	5	5	10
P1-B34	30	70	80	5	5	10
P1-B35	30	70	80	5	5	10
P1-B36	30	70	80	5	5	10
P1-B37	30	70	80	5	5	10
P1-B38	30	70	80	5	5	10
P1-B39	30	70	80	5	5	10
P1-B40	30	70	80	5	5	10
P1-B41	30	70	80	5	5	10
P1-B42	30	70	80	5	5	10

Figure 13-1 – BCM Branch Configuration Window

SF

SFCM Panel 2 - Subfeed Configuration

X

	Reg. 36	Reg. 37	Reg. 38	Reg. 39	Reg. 40	Reg. 41	Reg. 42	Reg. 52	Reg. 53	Reg. 54	Reg. 55	Reg. 57	Reg. 59	Reg. 60
PNL-SF#	Current Rating	On-Off & CT Scale	OC Warning Limit	OC Alarm Limit	UC Alarm Limit	Warning Delay	Alarm Delay	OV Alarm Limit	UV Alarm Limit	OV Warning Limit	UV Warning Limit	Over KW/KVA Limit	Neutral OC Limit	Neutral CT Scale
P2-SF01	400	16	70	80						80	110	90	100	80
P2-SF02	400	16	70	80						80	110	90	100	80
P2-SF03	400	16	70	80						80	110	90	100	80
P2-SF04	400	16	70	80						80	110	90	100	80
P2-SF05	400	16	70	80						80	110	90	100	80
P2-SF06	400	16	70	80						80	110	90	100	80
P2-SF07	400	16	70	80						80	110	90	100	80
P2-SF08	400	16	70	80						80	110	90	100	80
P2-SF09	400	16	70	80						80	110	90	100	80
P2-SF10	400	16	70	80						80	110	90	100	80

Table Instructions

X

To change individual settings:
Double-click the cell.

OK

Figure 13-2 – SFCM Subfeed Configuration Window

14.0 BCM Panel Readings/Configuration Window

The BCM Panel Readings/Configuration windows (shown below in [Figure 14-1](#)) show the BCM panel readings and the alarm/warning status and limit settings for each of the four panels. Instructions for using these windows are in the tooltips, which appear when the mouse is over the cells. The instructions for using this window are as follows:

- Latched alarms or warnings can be reset by double-clicking the associated cell.
- The limit settings can be changed by double-clicking the associated cell.

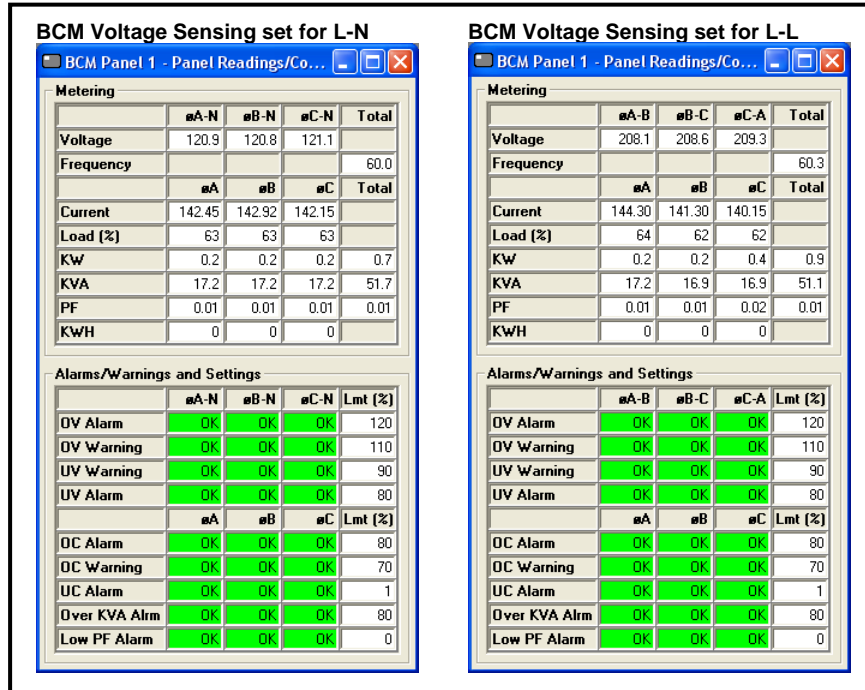


Figure 14-1 – BCM Panel Readings/Configuration Window

[Figure 14-1 \(above\)](#) shows example screenshots with the BCM Voltage Sensing option set for both “L-N” and “L-L”. (See [Section 8.0 above](#).)

The BCM Panel Configuration window, shown below in [Figure 14-2](#), is also available in the View menu, where you can change settings by double-clicking the cell. Panel configurations can also be performed in the System and Panel Configuration Window shown above in [Figure 8-1](#).

BCM Panel Configuration			
ID	Parameter Name	Panel 1	Panel 3
798	OC Alarm Limit (%)	80	80
799	OC Warning Limit (%)	70	70
800	UC Warning Limit (%)	1	1
801	Current Alarm Delay (sec)	10	10
802	Current Warning Delay (sec)	5	5
809	OV Alarm Limit (%)	120	120
810	UV Alarm Limit (%)	80	80
811	OV Warning Limit (%)	110	110
812	UV Warning Limit (%)	90	90
813	Voltage Warning Delay (sec)	5	5
814	Voltage Alarm Delay (sec)	10	10
835	Over KW/KVA Limit (%)	80	80
838	Low PF Alarm (%)	0	0
839	PQ Alarm Delay (%)	10	10
804	Source Number	1	1
847	Voltage Rating (Volts)	120	120
848	Current Rating (Amps)	400	400
849	Frequency (Hz)	60	60

Figure 14-2 – BCM Panel Configuration Window

15.0 Calibrating the BCM/SFCM

Note: These functions are available only in RS-232 mode.

When logged in on Level 1 or 2, you can calibrate the BCM/SFCM using the controls on the Calibration windows, shown below in [Figure 15-1](#), which are opened by selecting Calibration in the Main Menu.

For calibration instructions, refer the BCM/SFCM User Manual.

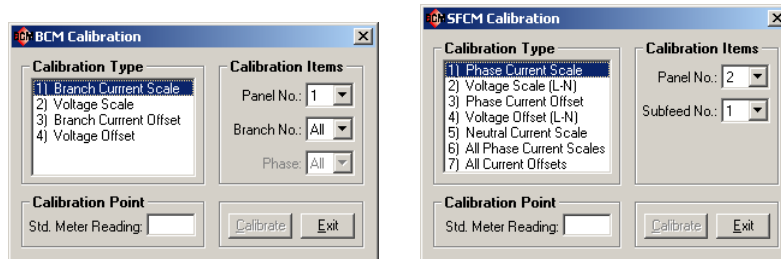


Figure 15-1 – BCM/SFCM Calibration Windows

16.0 Upgrading/Downgrading the BCM/SFCM Firmware

You must be in RS-232 mode and logged in on Level 2 to use the BCM/SFCM Configurator application for upgrading or downgrading the BCM/SFCM firmware. To see the Upgrade window as shown below in [Figure 16-1](#), select Upgrade in the main menu bar.

When the program is installed, it is not configured with any "Software Upgrade File" paths, which appear in the combo box in the Upgrade Software page as shown below. Software upgrade file paths can be added, removed and saved by the program so that they will still be there when the program is closed and reopened later.

A new software upgrade file path can be added by dragging from Windows Explorer and dropping into the white "Software Upgrade File" combo box. Then it can be saved for future use by clicking the Save button.

You can also add a new software upgrade file path by clicking the Browse button just below the "Software Upgrade File" combo box. A new window will open as shown in [Figure 16-2](#) below. This is a standard "File->Open" dialog box that lets you browse through folders so that you can find and select the upgrade file that you need. Click the Open button after selecting the correct upgrade file as shown below.

Once a new software upgrade file path selected, the Save button (below the white combo box) will become enabled. You can then save the new software upgrade file path in the list by clicking the Save button.

To see the software upgrade file paths in the list, click on the down-arrow button on the right-hand side of the combo box as shown below in [Figure 16-3](#). Then you can select the file that you want to use for the upgrade.

Note: To remove a path from the list, simply select the path and click the Remove button in that frame.

When a software upgrade file is selected (like shown in [Figure 16-3](#)), you can click the "Open Folder" button (in the same frame) to open its folder with the file selected in Windows Explorer. This is handy for checking file dates, etc.

Also note that the software upgrade files should be named with the major revision number following a 'v', which is followed by a '_' as shown in the following example.

bcm_sfcm_v1_12.bin

Otherwise, if the software upgrade file is not named correctly, you may see the following warning message to appear when the “Upgrade” button is clicked:

The major revision number of the new software (v#) does not match the existing software (v#).
This may be due to a hardware incompatibility.

If this happens, you have the option either to cancel or proceed with the upgrade. (Usually, when performing software upgrades, the major revision number of the new software should match the major revision number of the old software.)

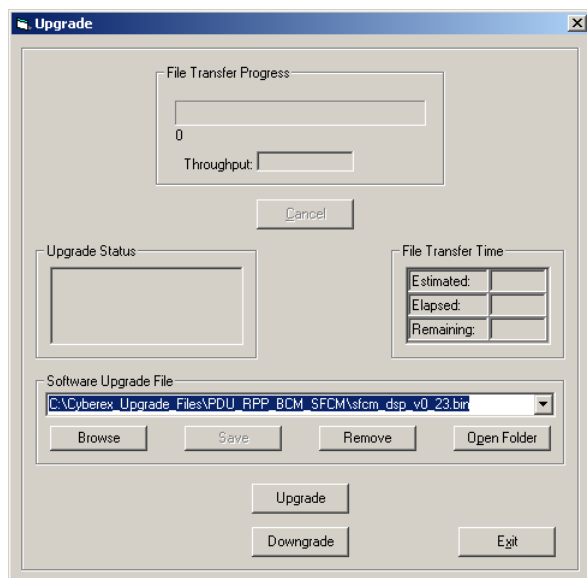


Figure 16-1 – Upgrade Window

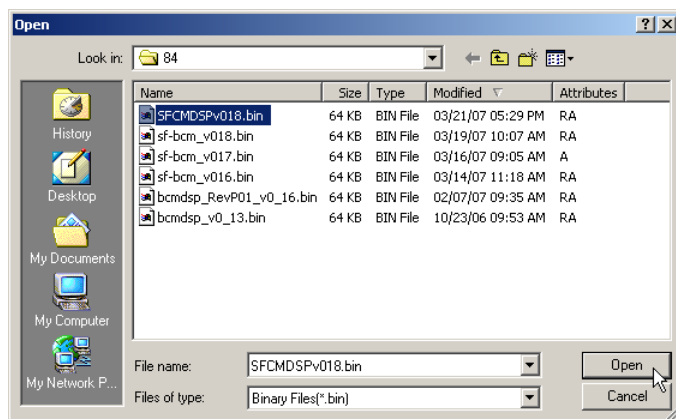


Figure 16-2 – Browsing Software Upgrade Files

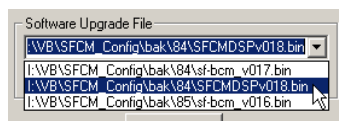


Figure 16-3 – Selecting Saved Software Upgrade Files

Once the software upgrade file is selected, click the Upgrade button to start the upgrade. The File Transfer Progress bar should start growing and the "Upgrade in process" message should appear as shown below. The Cancel button can be clicked to stop the upgrade, if needed.



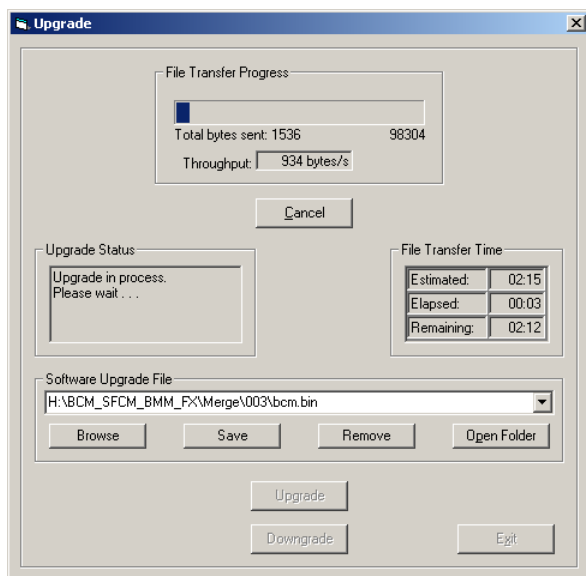


Figure 16-4 – Software Upgrade in Process

The upgrade file transfer takes about 2 ¼ minutes. After the file transfer has completed, you should see the following message box pop up.

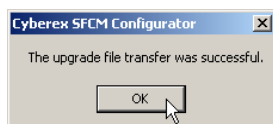

After clicking the OK button, you should see the following message box pop up. After acknowledging these two messages, the BCM/SFCM should start running with the new software upgrade loaded.

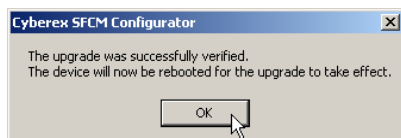

17.0 Opening the Terminal Window

When logged in on Level 1 or 2, you can open the Terminal window, as shown in [Figure 17-1](#) below, by selecting Connection→Terminal on the main menu bar. When the Terminal window is open, you can enter service port commands into the smaller lower textbox.

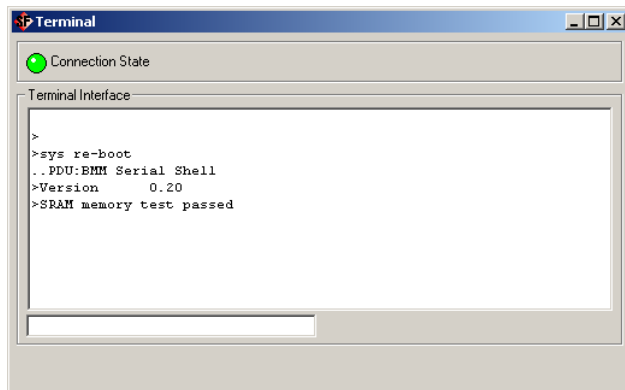


Figure 17-1 – Terminal Window

18.0 Temporarily Closing the PC's Serial Port

The PC's serial port can be temporarily closed and reopened without exiting the BCM/SFCM Configurator application by selecting Connection→Disconnect and Connection→Connect on the main menu bar. This is convenient to use when you want to temporarily communicate with the BCM/SFCM with another application.

19.0 Creating Service Port Script Files

This application can be used to create service port script files to use for configuring BCM/SFCM units and for verifying the settings after configuring. The files can be created without having a BCM/SFCM connected to the PC.

To open the Create Scripts window, select Scripts→Create Scripts in the main menu bar. The window will open as shown below.

The 'Create Scripts' window is a graphical user interface for creating and managing script files. It features a blue title bar and standard window controls. The main area is divided into several sections:

- System Settings:** A table with columns 'Index' and 'Description'. It lists four items: 853 Baud Rate..., 858 Latching Set Bit..., 863 Zero Cutoff (Amps x 10), and 864 BCM Voltage Sensing Mode....
- Panel Type:** A section with four radio buttons: 0) BCM (Seq.), 4) SFCM+Neutrals, 1) BCM (Std.), and 5) SFCM-Neutrals.
- Panel Settings:** A table with columns 'Index' and 'Description'.
- Branch Settings:** A table with columns 'Index' and 'Description'.
- Branch Global Settings:** A table with columns 'Index' and 'Description'.
- Calibration Settings:** A table with columns 'Index' and 'Description'. It lists three items: Current Offset Calibration (All), Voltage Offset Calibration (All), and another item.
- Selection:** A large, empty rectangular area in the center of the window.
- New Setting:** A section with a text input field and an 'Add to Script' button.
- Script File Text:** A large text area for editing the script file content.
- Buttons:** A row of buttons at the bottom right: Clear Text, Open Existing File, Run Script via Modbus, Make Read File, Open Folder, Stop Run via Modbus, Save Script File, Run Script via Terminal, and Exit.

Figure 19-1 – The Create Scripts Window (Initial View)

The last script file used will be loaded into this form.

The items that appear in the blank list boxes above depend on the Panel Type selected by the Panel Type radio buttons on the form. For example, the following screenshot shows the window when "BCM (Std.)" (Panel Type 1) is selected.

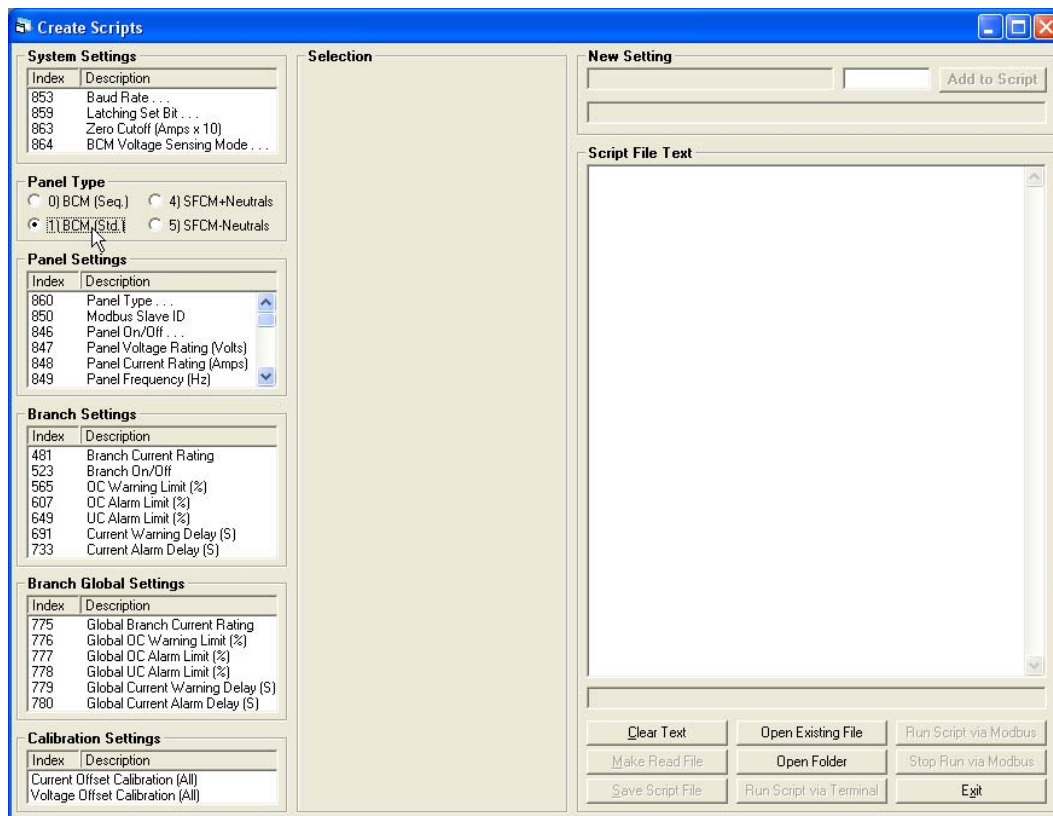


Figure 19-2 – The Create Scripts Window: “BCM (Std.)” (Panel Type 1) is Selected

Also, the items available in the Selection frame above depend on the item selected in the list boxes on the form. For example, the following screenshot shows the window when an item in the "Branch Settings" list box is selected.

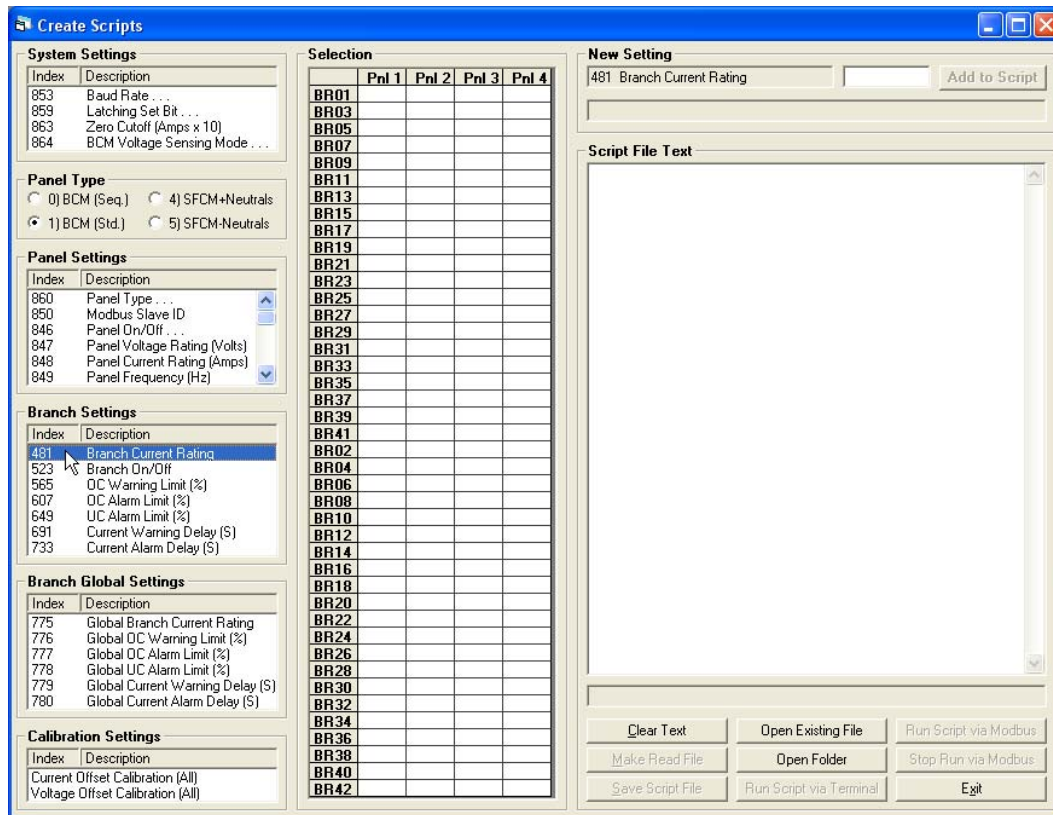


Figure 19-3 – The Create Scripts Window (Branch Settings Item Selected)

The large grid or table that appears (as shown above) is used for selecting the branches, subfeeds, or panels that you want to change. These items are selected or unselected by clicking or clicking and dragging the mouse over the cells. The selected cells are highlighted with a dark blue color as shown in the example below.

The cells in an entire row or column can be selected or unselected by clicking the header for a row or column. The cells in the entire table can be selected or unselected by clicking the header cell in the upper right-hand corner of the table.

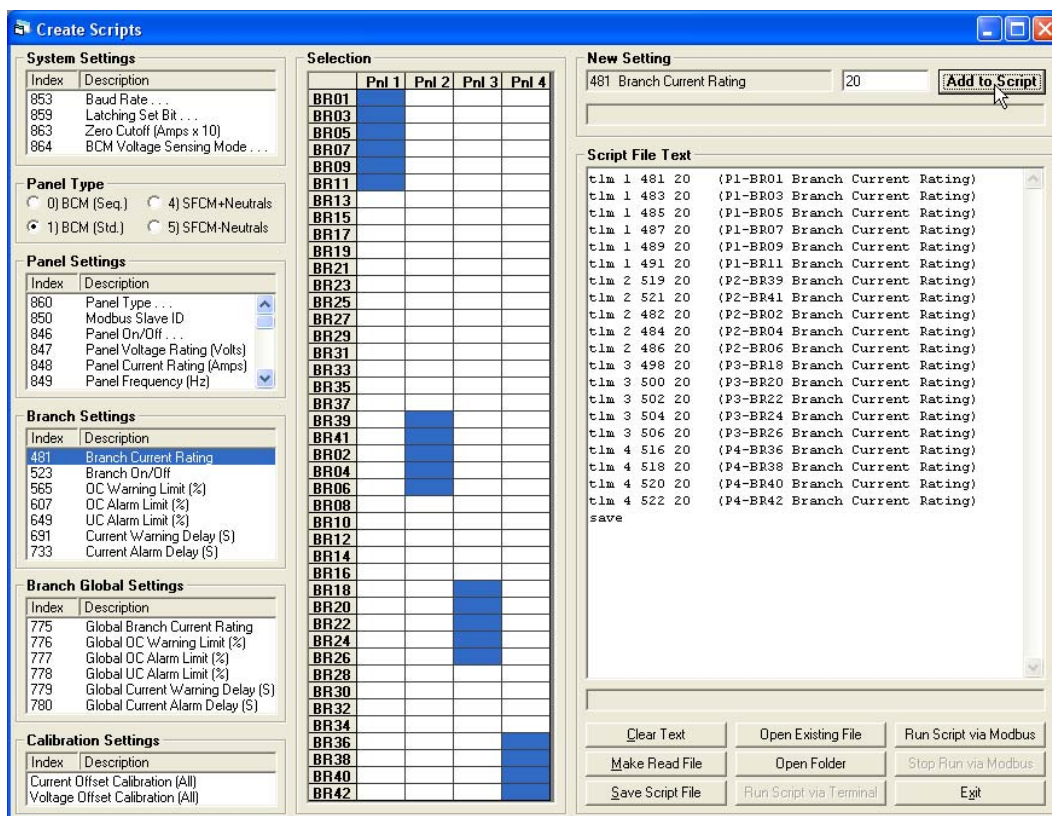


Figure 19-4 – The Create Scripts Window (Cells Selected)

After cells are selected as shown in the screenshot above, a number can be entered into the New Setting textbox. Then, when the "Add to Script" button is clicked, a line of text will be added to the text in the large "Script File Text" textbox for each cell selected as shown above.

19.1 Procedure for Creating a New Script File

The following procedure can be used for creating a new script file.

19.1.1 Clear the Script File Text Box

19.1.1.1 Clear the Script File Text Box by clicking the Clear Text button.

19.1.2 Add System Settings to the Script File Text as Follows:

19.1.2.1 Starting at the upper left-hand corner of the window, select a System Setting you want to add to the script file by clicking the item in the list box.

19.1.2.2 Enter the new value you want to for this item in the New Setting (white) textbox.

19.1.2.3 Click the Add to Script button to add this command to the script file. The new command line should appear in the large Script File Text box on the right-hand side of the window.

Note: The text in the Script File Text box can be manual edited or deleted, like using Notepad.

19.1.2.4 You can repeat this process to add other "System Settings" items, if required.

19.1.3 Add Panel Settings to the Script File Text as Follows:

19.1.3.1 Select a Panel Setting you want to add to the script file by clicking the item in the Panel Settings list box.

- 19.1.3.2 In the Selection frame, select the panel or panels you want to add by clicking or dragging the mouse over the appropriate cells in the grid.
- 19.1.3.3 Enter the new value you want to for this item in the New Setting textbox. (This value will be used for all panels selected.)
- 19.1.3.4 Click the Add to Script button to add this item to the script file. The new command line/s should appear in the Script File Text box on the right-hand side of the window.
- 19.1.3.5 You can repeat this process to add other "System Settings" items, if required.

19.1.4 Add Branch/Subfeed Settings to the Script File Text as Follows:

- 19.1.4.1 Select a Branch or Subfeed Setting you want to add to the script file by clicking the item in the Branch Settings or Subfeed Settings list box.
- 19.1.4.2 In the Selection frame, select the Branch/es or Subfeed/s and Panel/s you want to add by clicking or dragging the mouse over the appropriate cells in the grid.
- 19.1.4.3 Enter the new value you want to for this item in the New Setting textbox. (This value will be used for all panels selected.)
- 19.1.4.4 Click the Add to Script button to add this item to the script file. The new command line/s should appear in the Script File Text box on the right-hand side of the window.
- 19.1.4.5 You can repeat this process to add other Branch or Subfeed Settings items, if required.

19.1.5 Voltage and Current Offset Calibration:

This application also provides the option of putting Voltage and Current Offset Calibration for each panel into script file. This is done by selecting the item in the "Calibration Settings" list box and following the same procedure for adding the other items to the script file as described above, except that you do not enter a number into the New Setting textbox.

19.1.6 Save the Script File as Follows:

You can edit or delete text in the Script File Text box if necessary. When ready, save the finished script file by clicking the "Save Script File" button. A "Save As" dialog box will appear, prompting you for a new file name for the new script file. The default folder for saving script files is the "\Scripts" subfolder in the application's folder.

19.1.7 Running the Script File:

Once the file has been saved, you can run the script file via terminal mode by clicking the "Run Script via Terminal" button. This opens the Script File Transfer and Terminal windows as shown below in Section 20.0. (This is the same as selecting Scripts→Run Script via Terminal in the main menu bar as described in Section 20.0 below.)

The script file can also be run via Modbus by clicking the "Run Script via Modbus" button. The program converts the script file text into Modbus commands. This runs faster than via Terminal and can be used with Modbus RTU or Modbus TCP. The voltage and current offset calibration cannot be done using this method. It can only be used with TLM commands.


19.2 Procedure for Creating a "Verify Script File"

After a new script file has been created, it may be a good idea to create another script file to use for verifying that the new settings have been actually been saved in the BCM/SFCM after being configured. This "Verify Script File" or "Read File" can be easily created from an existing setup script file as follows.

With the script file text in the Script File Text box (e.g., after saving the script file in the procedure above), click the "Make Read File" button. (This changes the text in the Script File Text box into commands for reading data instead of writing data to the BCM/SFCM.) Then save the text to a new file by clicking the "Save Script File" button. In the "Save As" dialog box, which will appear, enter a new file name that distinguishes this as a "Verify Script File" or "Read File".

20.0 Running Service Port Script Files

This application can be used to run service port script files for configuring BCM/SFCM units and for verifying the settings after configuring. To open the Script File Transfer window, select Scripts→Run Script in the main menu bar. The window will open and the Terminal window should open a few seconds later as shown below.

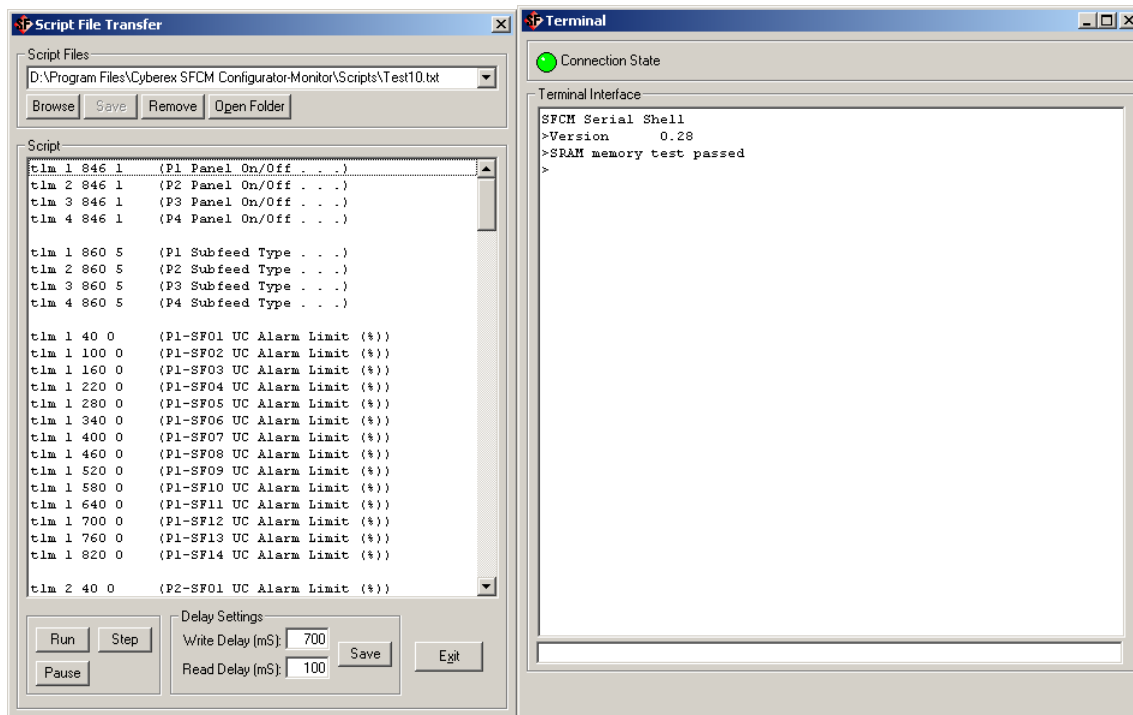

The program will load the last script file used. To load another script file, click the Browse button and select an existing script file in the "Open" dialog box, which will appear. (The "Script File Transfer" window can also be opened from the "Create Script File" window by clicking the "Run Script" button in that window. When opened this way, the current script file in the "Create Script File" window will be loaded into the "Script File Transfer" window.)

When you have the correct script file loaded, click the Run button in the "Script File Transfer" window. You should see the highlighter bar shift down in the "Script" list box and the commands being echoed in the Terminal Interface textbox in the Terminal window.

21.0 Capturing Settings

To capture the settings, open the “All Settings” window by selecting “View > All Settings” on the menu bar. After the table has populated (after about 20 seconds), you will see the window caption change from “Updating” to “Updated”, followed by a timestamp, as shown in the example screenshot below. Then, right-click on the table and select “Capture to File” on the popup menu as shown below.

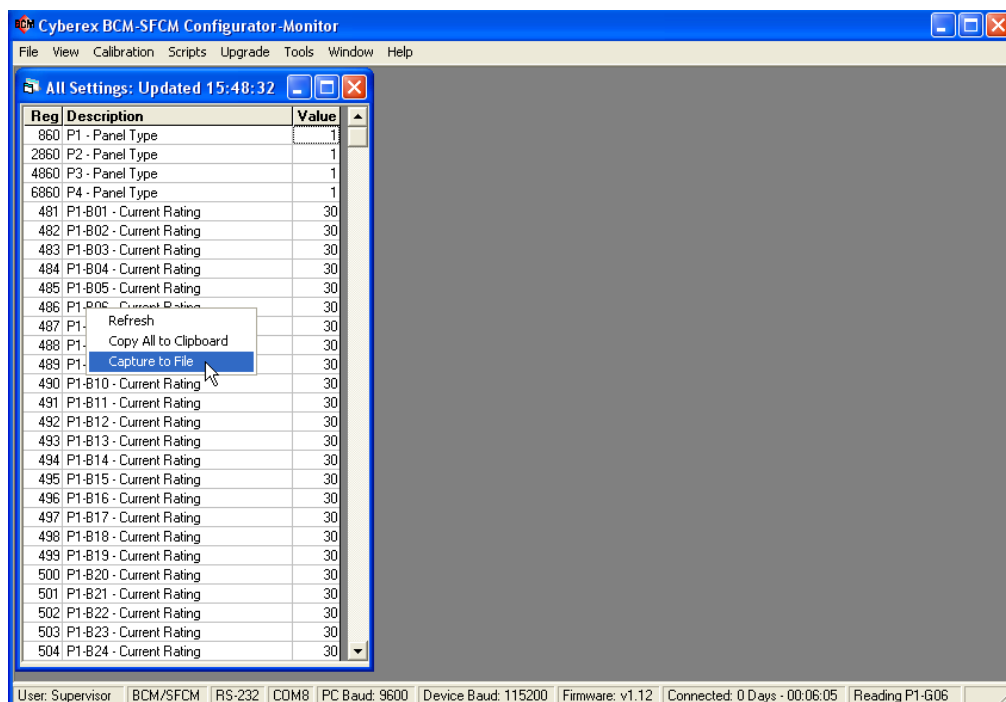


Figure 21-1 – Selecting “Capture to File” in the “All Settings” Window

The program will save the data to a file, which will be named:

Settings_XXX.txt (where XXX is a serialized file number)

The program will then automatically open Windows Explorer with this new file selected, as shown below in [Figure 21-2](#). This file will be located in the “Downloads” subfolder of the application’s folder (usually “C:\Program Files\Cyberex BCM-SFCM Configurator-Monitor\Downloads”) for Windows XP).

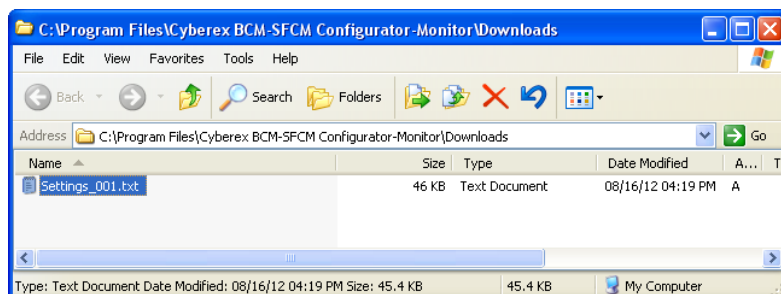


Figure 21-2 – Windows Explorer Opens with the New File Selected

Also, at the same time, the program will automatically open the “Select Settings Download Files” window with the new file added at the bottom of the list, as shown below in [Figure 21-3](#).

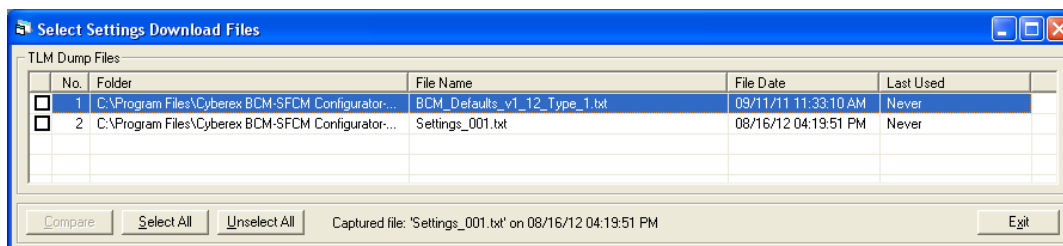


Figure 21-3 – The “Select Settings Download Files” Window with the New File Added

22.0 Comparing Captured Setting Files

This program can be used to compare the Captured Settings files. Possible uses for this may be to compare the settings on one module against another or against a file with the default settings. This feature can also be used for creating custom script files for configuring modules.

Note that to compare settings in two or more files, the Panel Type settings in the files must match. For example, if the four Panel Types in the first file are 1, 1, 4, & 5 (respectively for Panels 1, 2, 3, & 4), then the Panel Types in the second file must also be 1, 1, 4, & 5. This rule does not apply to Panel Types 0 and 1; these types can be compared.

To compare Captured Settings files, open the “Select Settings Download Files” window by selecting “Tools > Compare Settings” in the menu bar. This window is shown above in [Figure 21-3](#). The Captured Settings files can be added into the list in this window by dragging and dropping from Windows Explorer or by right-clicking in the list and selecting “Add New File” in the popup menu.

The following “Default Settings” files are installed with the program:

- BCM_Defaults_v1_12_Type_0.txt: BCM (Sequential Numbering)
- BCM_Defaults_v1_12_Type_1.txt: BCM (Two-Column – Standard)
- SFCM_Defaults_v1_12_Type_4.txt: SFCM with Neutrals
- SFCM_Defaults_v1_12_Type_5.txt: SFCM without Neutrals

These file are located in the “Default_Settings” subfolder of the application’s folder (usually “C:\Program Files\Cyberex BCM-SFCM Configurator-Monitor\Default_Settings” for Windows XP), which can be opened by right-clicking on file list and selecting “Open Default Settings Folder” in the popup menu as shown below in [Figure 22-1](#).

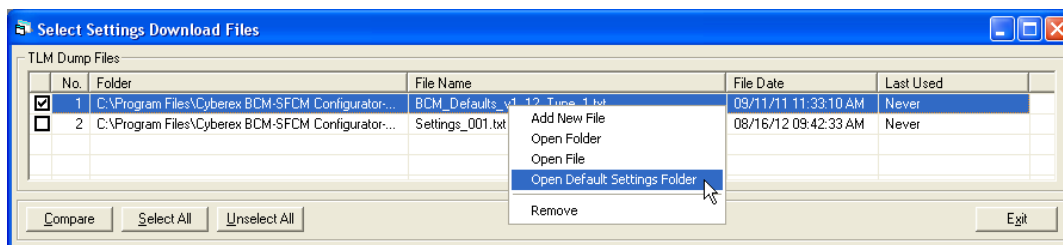


Figure 22-1 – Right-Click to Access the Popup Menu

To compare two or more Captured Settings files with each other, simply select them in the “Select Settings Download Files” window by ticking their checkbox, and then click the “Compare” button as shown below in [Figure 22-2](#). This will cause the “Compare Setpoints” window to open as shown below in [Figure 22-3](#).

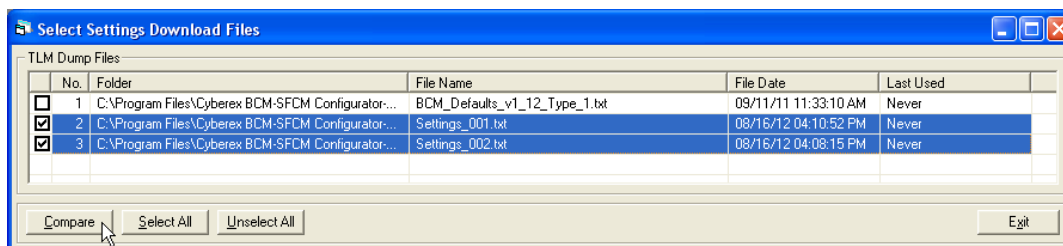


Figure 22-2 – Select Files and Click the “Compare” Button

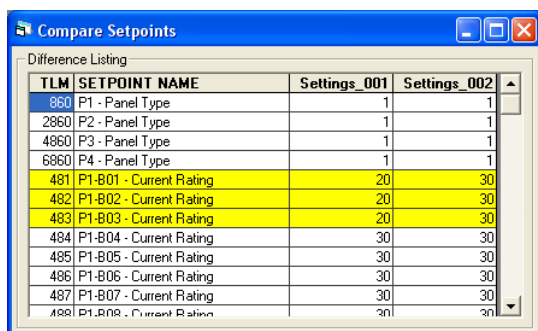


Figure 22-3 – The “Compare Setpoints” Window

Note that in the “Compare Setpoints” window, the differences between the files will be highlighted in yellow, as shown in the example screenshot above.

To view this data in an Excel spreadsheet, right-click on the “Compare Setpoints” window and select “Open in Excel” in the popup menu as shown below in Figure 22-4. This will cause Excel to open with the data, as shown below in Figure 22-5. The program will automatically save the Excel file in the folder with the last selected “Settings Download” file and give it the name of the last selected “Settings Download” file (but with the “.xls” extension). If a file already exists with this name, you will have the option of replacing the file or selecting a different filename in a “Save As” dialog box, which will open.

Note: Microsoft Excel 2003 is required to use this feature.

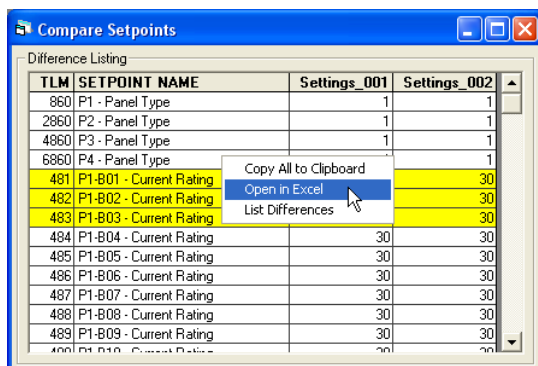


Figure 22-4 – Right-Click to Access the Popup Menu

	A	B	C	D
	TLM	SETPOINT NAME	Settings_001	Settings_002
2	860	P1 - Panel Type	1	1
3	2860	P2 - Panel Type	1	1
4	4860	P3 - Panel Type	1	1
5	6860	P4 - Panel Type	1	1
6	481	P1-B01 - Current Rating	20	30
7	482	P1-B02 - Current Rating	20	30
8	483	P1-B03 - Current Rating	20	30
9	484	P1-B04 - Current Rating	20	30
10	485	P1-B05 - Current Rating	30	30
11	486	P1-B06 - Current Rating	30	30
12	487	P1-B07 - Current Rating	30	30
13	488	P1-B08 - Current Rating	30	30
14	489	P1-B09 - Current Rating	30	30

Figure 22-5 – Excel Opens with the Setpoint Data

To get a better view of the differences, right-click on the “Compare Setpoints” window (Figure 22-4 above) and select “List Differences” in the popup menu. This will cause the “Differences” window to open as shown below in Figure 22-6.

	TLM	SETPOINT NAME	Settings_001	Settings_002
481	P1-B01 - Current Rating	20	30	
482	P1-B02 - Current Rating	20	30	
483	P1-B03 - Current Rating	20	30	
565	P1-B01 - OC Warning Limit (%)	80	70	
566	P1-B02 - OC Warning Limit (%)	80	70	
567	P1-B03 - OC Warning Limit (%)	80	70	
607	P1-B01 - OC Alarm Limit (%)	90	80	
608	P1-B02 - OC Alarm Limit (%)	90	80	
609	P1-B03 - OC Alarm Limit (%)	90	80	
649	P1-B01 - UC Warning Limit (%)	1	5	
650	P1-B02 - UC Warning Limit (%)	1	5	
651	P1-B03 - UC Warning Limit (%)	1	5	
850	P1 - Modbus ID	11	7	
852	P1 - Minor Version	11	12	


Figure 22-6 – The “Differences” Window

The cyan-highlighted rows in the “Differences” window indicate items that will not be used when creating script files based on the differences. In the example screenshot above, the Software (Minor) Version is highlighted, which is not a setting that can be changed using a script file.

23.0 Creating Script Files from Captured Settings Files

To create service port script files based on the differences shown in the “Differences” window, right-click in the window and select “Create Script” in the popup menu as shown below in Figure 23-1.


This will cause the “Create Scripts” window to open with the script file text filled in, as shown below in Figure 23-2.

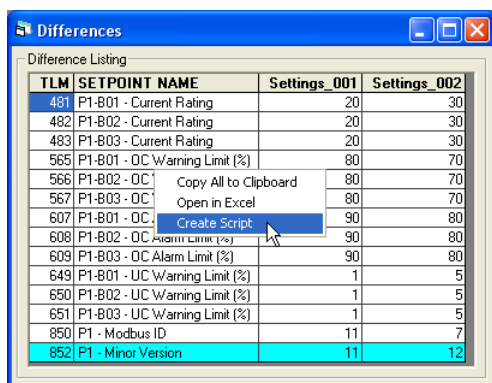

TLM	SETPOINT NAME	Settings_001	Settings_002
481	P1-B01 - Current Rating	20	30
482	P1-B02 - Current Rating	20	30
483	P1-B03 - Current Rating	20	30
565	P1-B01 - OC Warning Limit (%)	80	70
566	P1-B02 - OC	80	70
567	P1-B03 - OC	80	70
607	P1-B01 - OC	90	80
608	P1-B02 - OC Alarm Limit (%)	90	80
609	P1-B03 - OC Alarm Limit (%)	90	80
649	P1-B01 - UC Warning Limit (%)	1	5
650	P1-B02 - UC Warning Limit (%)	1	5
651	P1-B03 - UC Warning Limit (%)	1	5
850	P1 - Modbus ID	11	7
852	P1 - Minor Version	11	12

Figure 23-1 – Right-Click and Select “Create Script”

The script file will have the commands to change the settings to those in the first column shown in the “Difference” window. For example, in the example screenshot shown above, the script file will have the commands to change a unit’s settings to those shown in the “Settings_001” column.

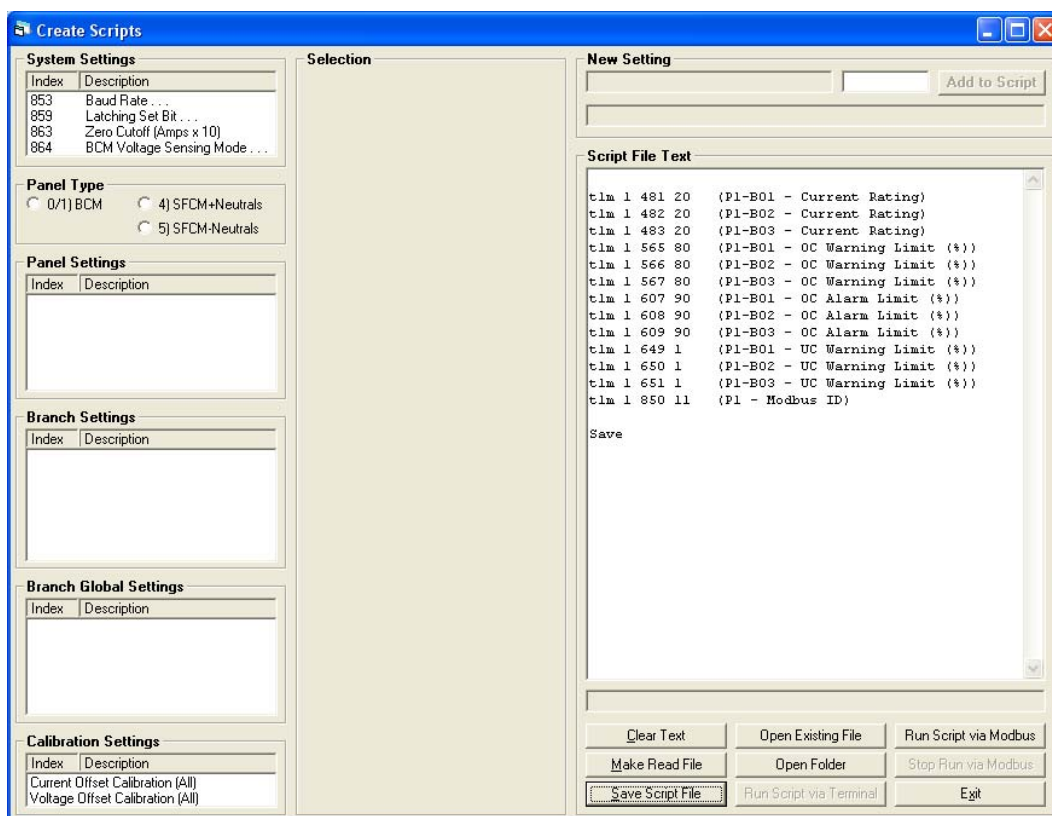

Create Scripts

System Settings

Index	Description
853	Baud Rate...
859	Latching Set Bit...
863	Zero Cutoff (Amps x 10)
864	BCM Voltage Sensing Mode...

Panel Type

☐ 0/1) BCM ☐ 4) SFCM+Neutrals ☐ 5) SFCM-Neutrals

Panel Settings

Index	Description
-------	-------------

Branch Settings

Index	Description
-------	-------------

Branch Global Settings

Index	Description
-------	-------------

Calibration Settings

Index	Description
Current Offset Calibration (All)	
Voltage Offset Calibration (All)	

Selection

New Setting

Script File Text

```

t1m 1 481 20 (P1-B01 - Current Rating)
t1m 1 482 20 (P1-B02 - Current Rating)
t1m 1 483 20 (P1-B03 - Current Rating)
t1m 1 565 80 (P1-B01 - OC Warning Limit (%))
t1m 1 566 80 (P1-B02 - OC Warning Limit (%))
t1m 1 567 80 (P1-B03 - OC Warning Limit (%))
t1m 1 607 90 (P1-B01 - OC Alarm Limit (%))
t1m 1 608 90 (P1-B02 - OC Alarm Limit (%))
t1m 1 609 90 (P1-B03 - OC Alarm Limit (%))
t1m 1 649 1 (P1-B01 - UC Warning Limit (%))
t1m 1 650 1 (P1-B02 - UC Warning Limit (%))
t1m 1 651 1 (P1-B03 - UC Warning Limit (%))
t1m 1 850 11 (P1 - Modbus ID)
    
```

Save

Figure 23-2 – The “Create Script” Window Opens with the Script File Text

Note that you can edit or delete text in the Script File Text box if necessary.

The script file can now be run via Modbus by clicking the "Run Script via Modbus" button in the “Create Script” window (above). The program converts the script file text into Modbus commands. This runs faster than via Terminal and can be used with Modbus RTU or Modbus TCP.

You can also save the script file by clicking the "Save Script File" button. Once the file has been saved, you can run the script file via terminal mode by clicking the "Run Script via Terminal" button. This opens the Script File Transfer and Terminal windows as shown in Section 20.0 above. (This is the same as selecting Scripts→Run Script via Terminal in the main menu bar as described in Section 20.0.)

24.0 Window Arrangement and Navigation Features

The child windows can be automatically arranged inside of the main parent window by selecting "Cascade" or "Tile" in the menu under "Window" as shown below, or by simply pressing the F2 or F3 key, respectively. If "Tile" is selected when there are a lot of child windows open, some of them will usually go out of the viewing area and a vertical scrollbar will then appear. You can then use this scrollbar (with the mouse) to view the child windows that are currently out of the viewing area.

The scrollbars on the main parent window can also be operated by the navigation keys on the keyboard as follows. First, press the F4 key (or select Window→Scroll Mode as shown below) to enter a special "Scroll Mode". When in Scroll Mode, the Page Up, Page Down, and arrow keys will operate the scrollbars on the main parent window. To exit Scroll Mode, press the Esc key, or click the mouse anywhere.

Selecting the "Close All Windows" item in the menu below will close all open child windows.

